




WINDOW VENT INSTALLATION

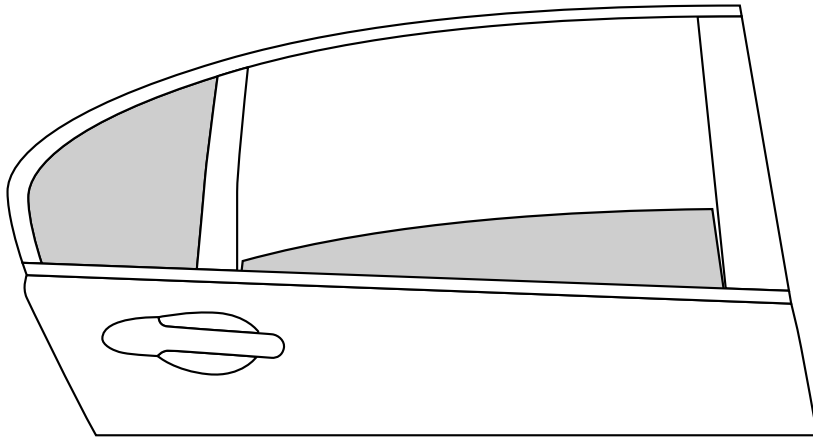


1. Roll Down Rear Window

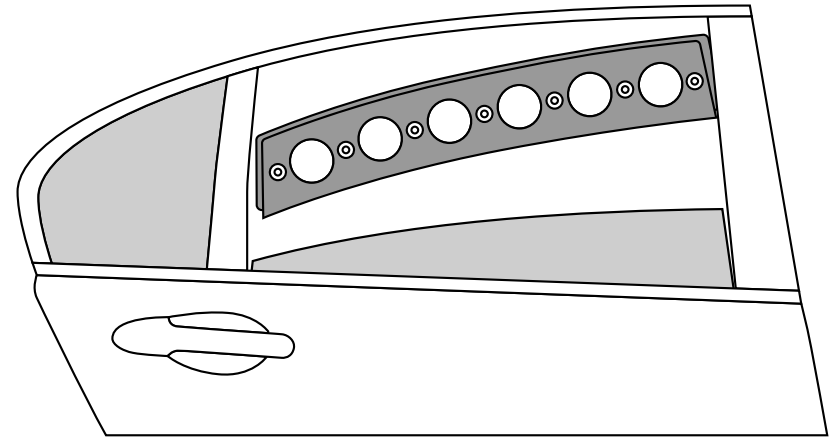

2. Insert front end of vent (notch forward) into window groove with the vent tilted down.

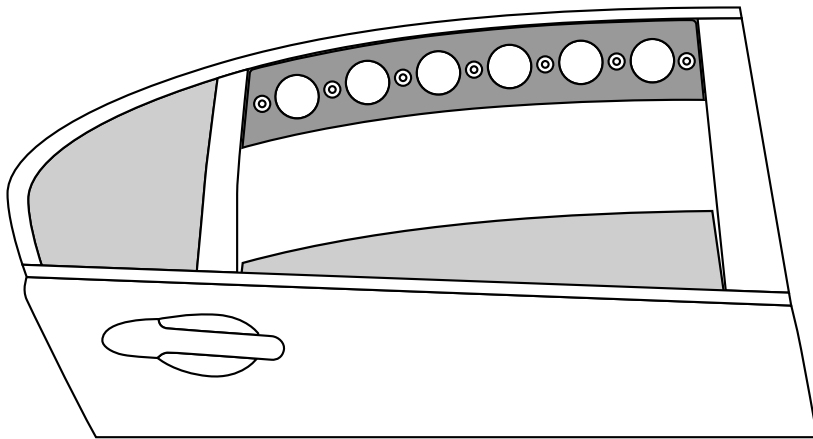

3. Slide back side up and into window groove.

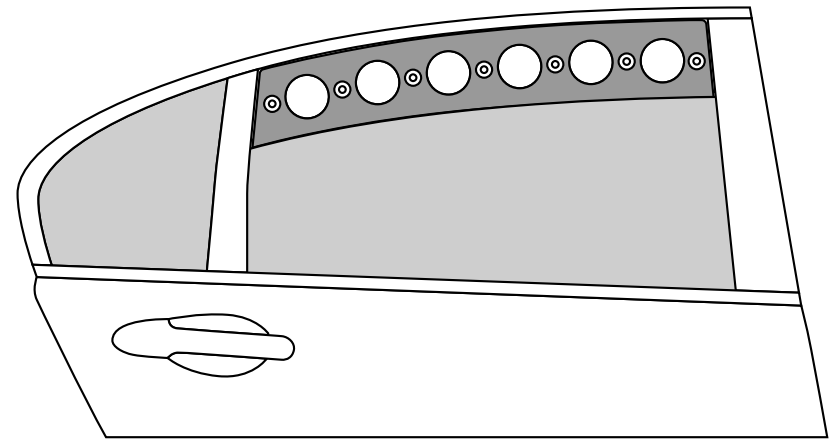

4. Roll window up while ensuring it slides into bottom groove of vent.